
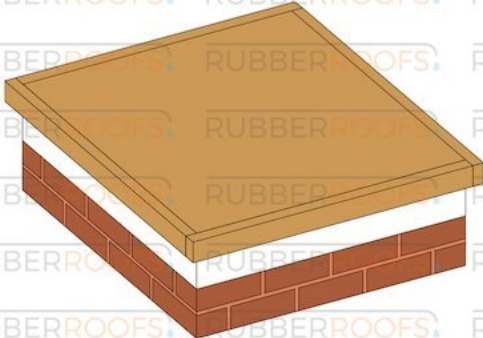
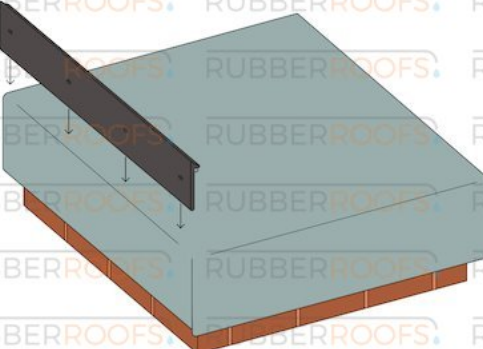
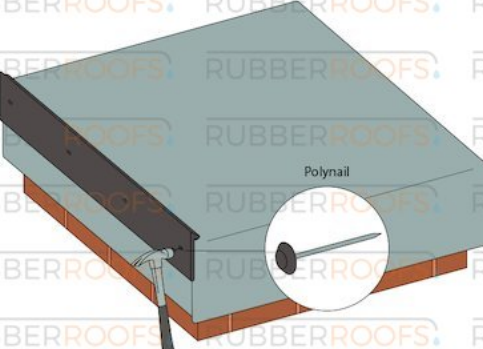
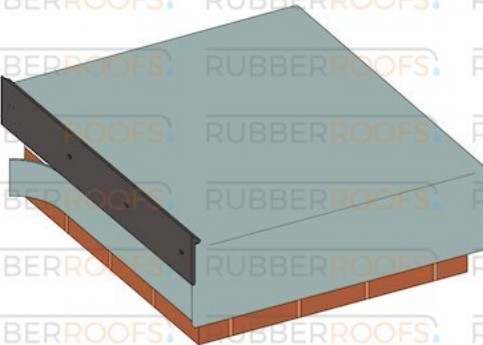


Edge Trims

Step by step guide on installing Rubber Roofing edge-trims to your next EPDM Roofing project.

	<p>Step 1 Install a 2" x 1" batten to the roof perimeter, level with roof deck.</p>
	<p>Step 2 Once the membrane is installed, push down on the edge trim.</p>
	<p>Step 3 Fix in place using the supplied polypins.</p>
	<p>Step 4 Trim any excess rubber with a sharp blade.</p>

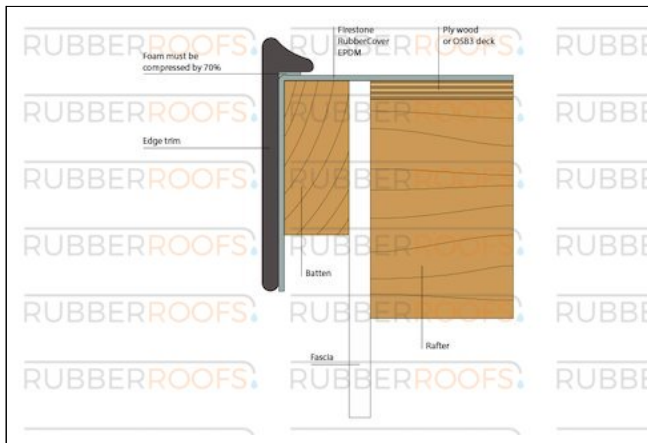

Step 5

Please allow 5mm gap between trims for expansion and contraction.