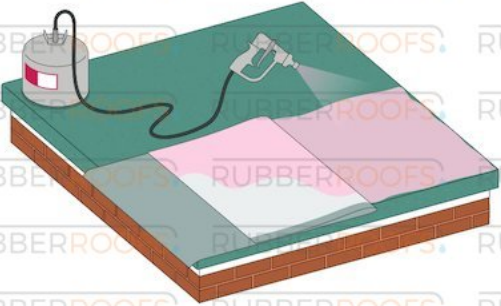

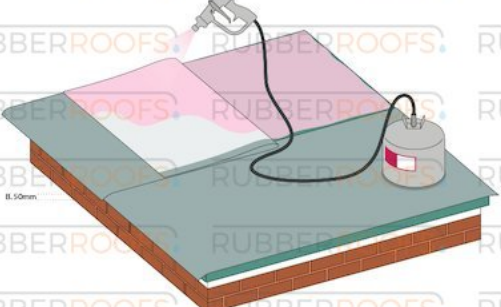
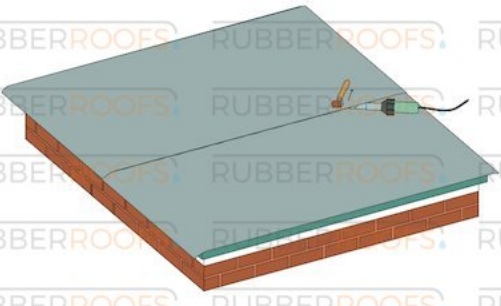


# Laying Lineflex With Spray Adhesive

A guide to laying Lineflex Fleece Backed EPDM membrane using spray contact adhesive.

	<p><b>Step 1</b> The deck must be dry and clean before laying the membrane. Spray apply contact adhesive to both deck and fleece and allow to touch dry.</p>
	<p><b>Step 2</b> Carefully mate the membrane onto the adhesive and repeat the process on the other side.</p>
	<p><b>Step 3</b> Carefully position adjoining sheet, overlap by 50mm and adhere as before.</p>
	<p><b>Step 4</b> Seal the rubber with a hot air welder using a silicone roller at a rate of 2.5m per minute at 220 degrees (level 4).</p>