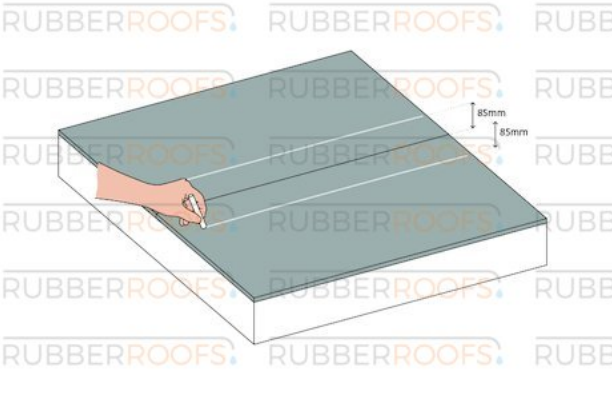

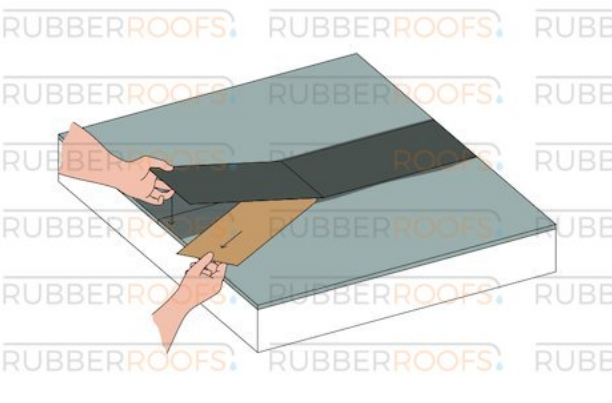
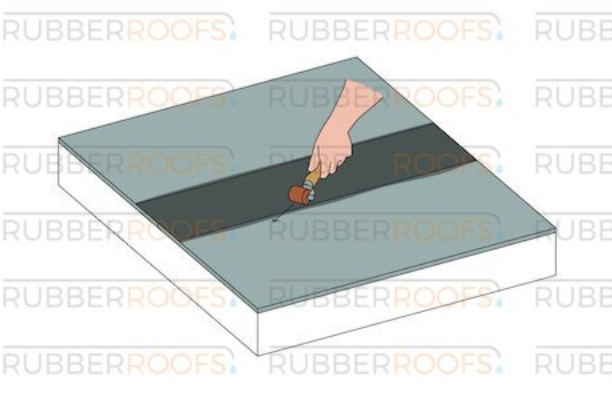


Butt Join

A guide to butting two pieces of adjoining Lineflex Fleece Backed EPDM membranes.

 An illustration showing two grey EPDM sheets being positioned side-by-side on a white substrate. A hand is shown marking the edge of the first sheet. A dimension line indicates an 85mm gap between the sheets.	<p>Step 1 Position the Rubber Cover sheets side by side.</p>
 An illustration showing a hand applying primer from a white bucket labeled 'Primer' onto the surface of the EPDM sheets. A yellow roller is used to spread the primer. A dimension line indicates an 85mm wide application.	<p>Step 2 Apply primer 85mm wide onto each sheet.</p>
 An illustration showing a hand applying a black cover tape along the seam between the two EPDM sheets. Another hand is shown peeling away a yellow backing paper from the tape at a 45-degree angle.	<p>Step 3 Position cover tape along the seam area and remove the backing paper at a 45-degree angle.</p>
 An illustration showing a hand using a yellow roller to press the two EPDM sheets together, ensuring the cover tape is properly adhered.	<p>Step 4 Thoroughly roller.</p>