
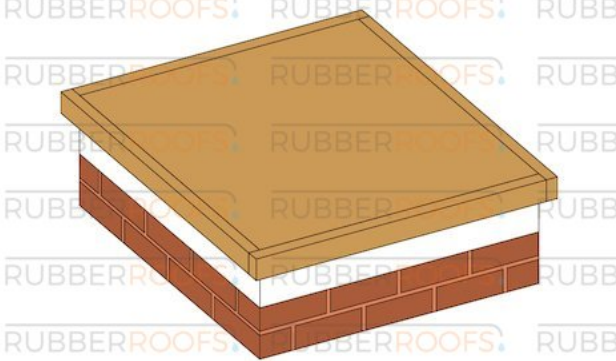
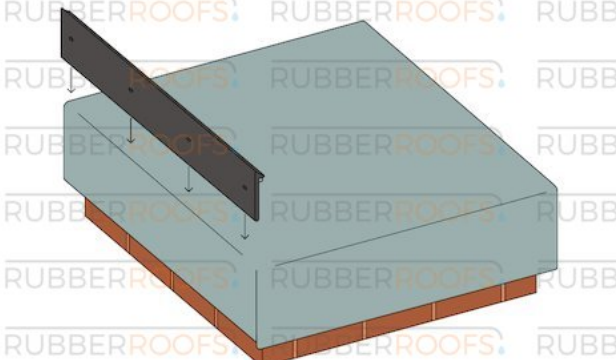
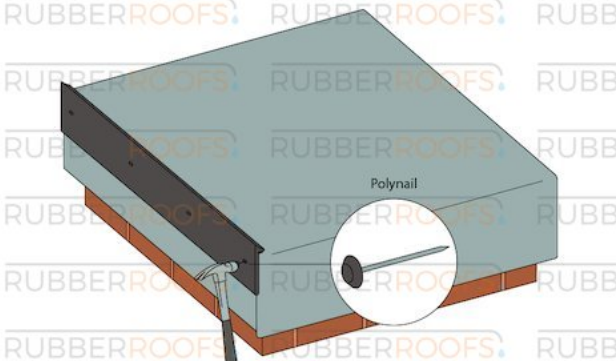
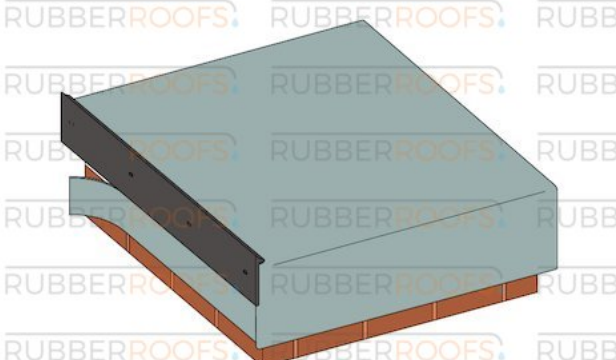


Edge Trim

A guide to installing edge trims to a Lineflex Fleece Backed EPDM flat roof.

	Step 1 Install a 2" x 1" batten to the roof perimeter, level with roof deck.
	Step 2 Once the membrane is installed, push down on the edge trim.
	Step 3 Fix in place using the supplied polypins.
	Step 4 Trim any excess rubber with a sharp blade.

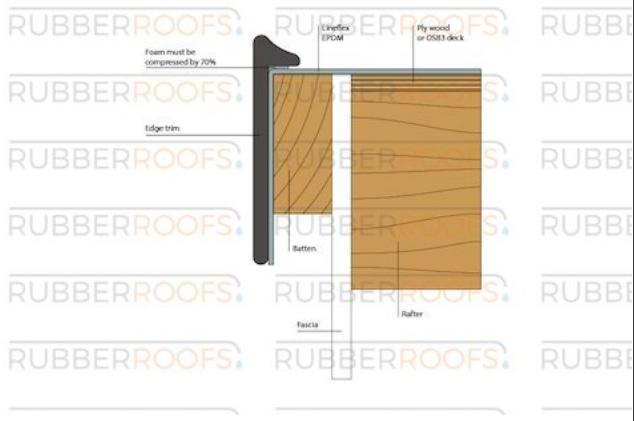

Step 5

Please allow 5mm gap between trims for expansion and contraction.