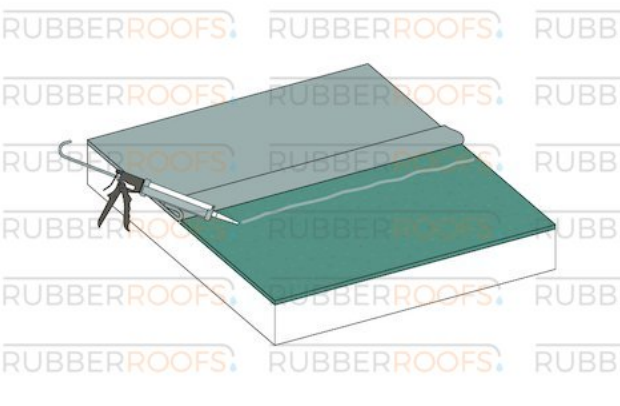
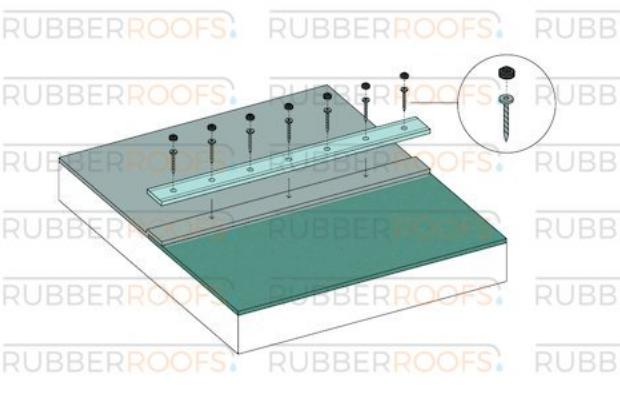
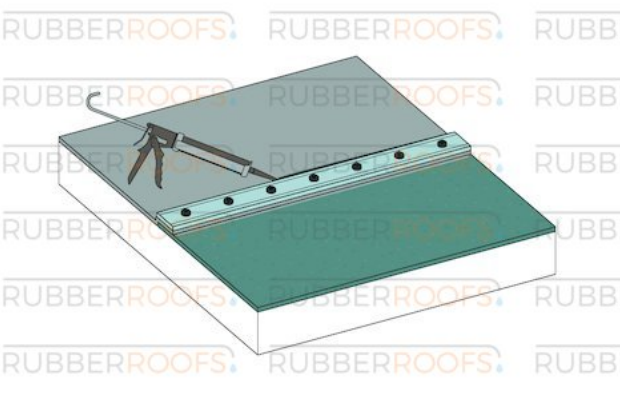


Felt Join

A guide to joining Lineflex Fleece Backed EPDM membrane to a felt roof.

	<p>Step 1</p> <p>Ensure that the receiving felt is clean and dust-free. Apply a thick bead of water block mastic.</p>
	<p>Step 2</p> <p>Tightly secure in place with a termination bar and the supplied fixings.</p>
	<p>Step 3</p> <p>Trim off excess membrane and seal edge with black mastic.</p>