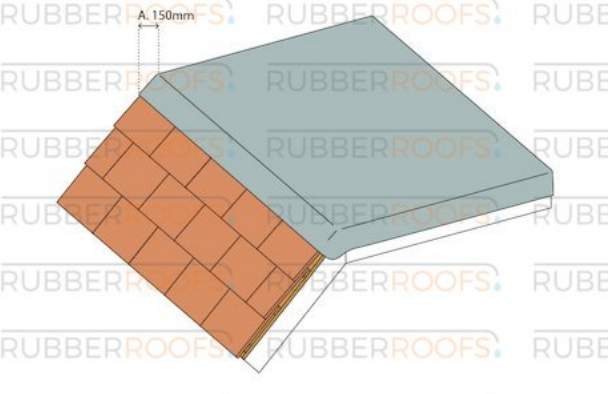
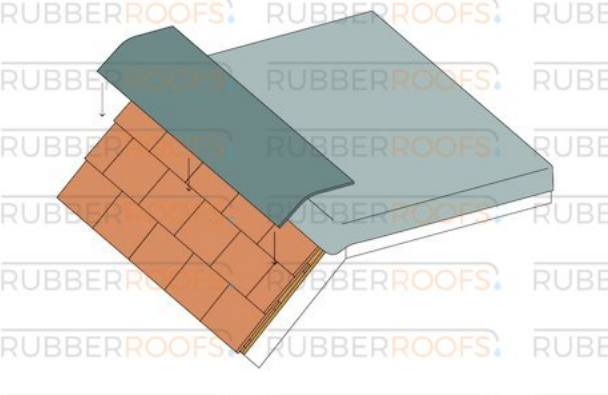
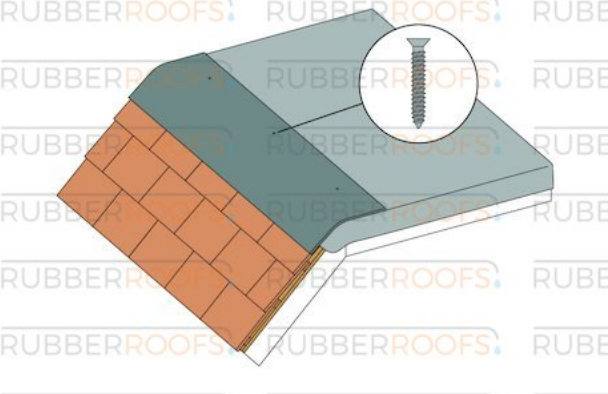

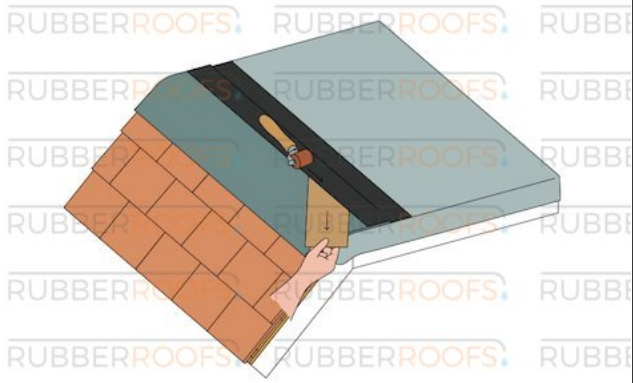


Onto Tiles

A guide to installing Lineflex Fleece Backed EPDM membrane onto tiles.

 A 3D perspective diagram showing a grey EPDM membrane being laid over a roof of orange tiles. A dimension line indicates a 150mm overhang of the membrane onto the tiles. The background is a repeating watermark of 'RUBBERROOFS'.	<p>Step 1 Allow 150mm overhang onto tiles.</p>
 A 3D perspective diagram showing the EPDM membrane being laid over tiles. A lead strip is being dressed into the membrane, with arrows indicating the placement of the lead onto the tiles and the deck. The background is a repeating watermark of 'RUBBERROOFS'.	<p>Step 2 Dress lead into place 6" onto tiles, 3" onto the deck. We recommend using minimum 9" Code 4 lead cut into 1200mm lengths max.</p>
 A 3D perspective diagram showing the EPDM membrane being laid over tiles. A screw is shown being driven into the membrane to fix it into position. The background is a repeating watermark of 'RUBBERROOFS'.	<p>Step 3 Fix into position using screws.</p>
 A 3D perspective diagram showing the EPDM membrane being laid over tiles. A hand is shown applying a dark liquid (Primer plus) to the lead and rubber. A can of Primer plus is also shown. The background is a repeating watermark of 'RUBBERROOFS'.	<p>Step 4 Apply Primer plus to lead and rubber approx. 160mm wide using Scrubber Pad and handle. Allow to go touch dry.</p>



Step 5

Centralize the 6" batten cover strip and carefully remove release paper applying downward pressure. Use a silicone roller to seal.