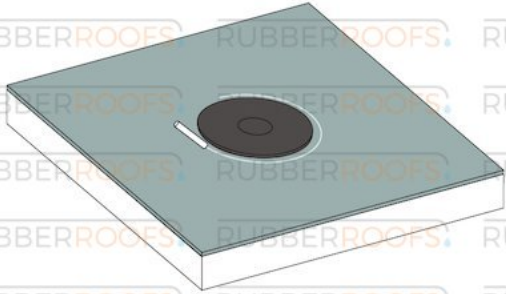

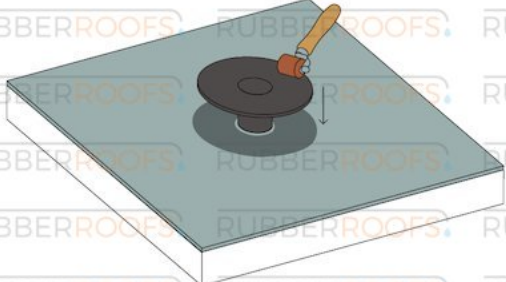
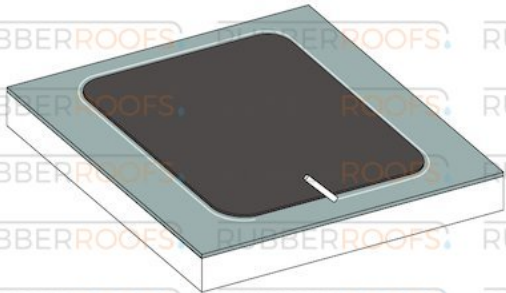
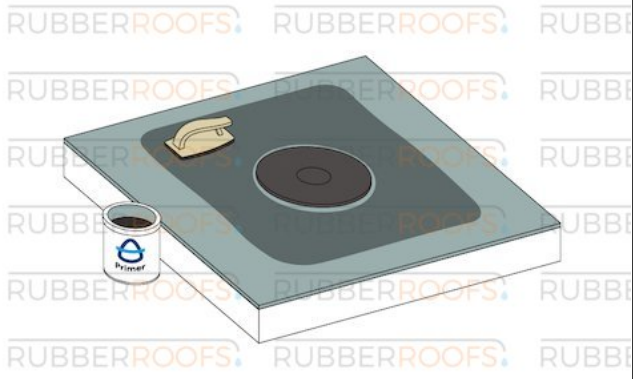


Rainwater Outlet

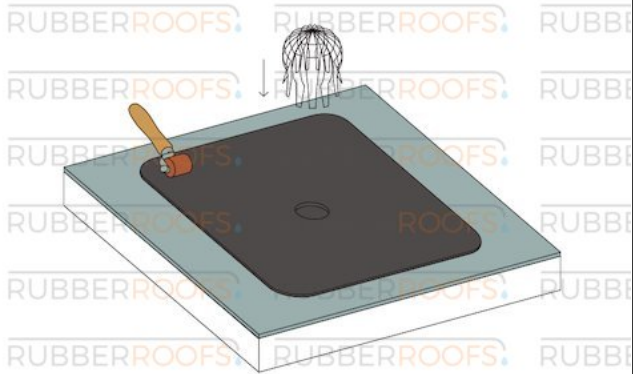
A guide to installing a rainwater outlet.

| | |
|---|---|
|  | <p>Step 1</p> <p>Place rainwater outlet through the pre-cut hole and mark around it using a crayon or similar.</p> |
|  | <p>Step 2</p> <p>Prime the underside of the rainwater outlet and 1cm beyond the marked area on the rubber using a quick scrubber pad and handle. Allow both surfaces to dry.</p> |
|  | <p>Step 3</p> <p>Mate the surfaces together and compress with a silicone roller.</p> |
|  | <p>Step 4</p> <p>Round the corners of the 18" form flash (outlet kit) with scissors and neatly position over outlet. Mark the perimeter with crayon.</p> |
| | |



Step 5

Prime the rubber and outlet using the quick scrubber pad and handle and extend primer beyond the crayon line by 2cm.



Step 6

Once touch dry, neatly position the 18" form flash and carefully remove the backing paper. Roller firmly in place and use a sharp blade to carefully cut out the hole.