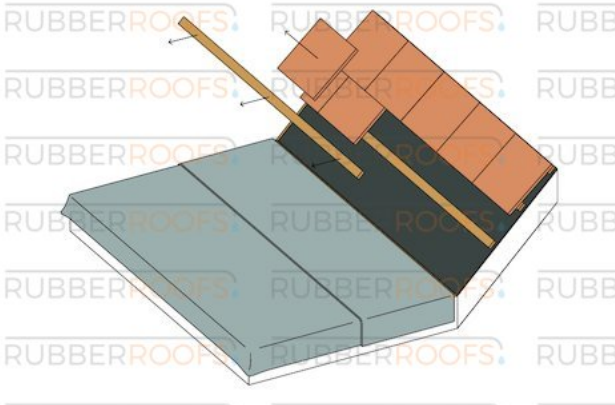
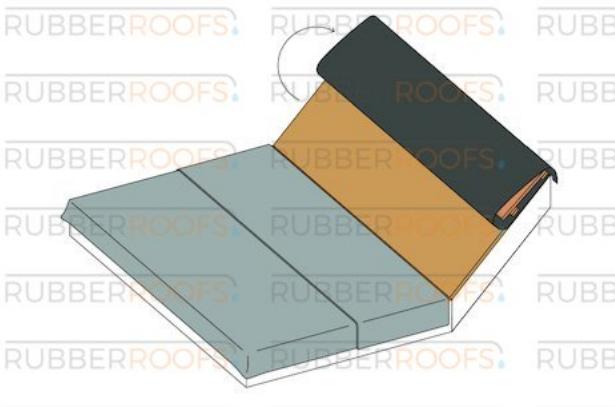
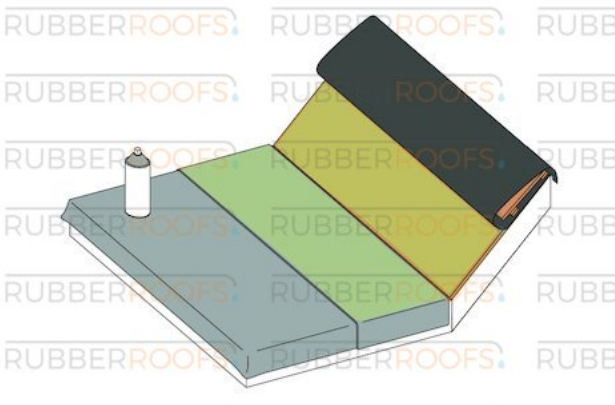
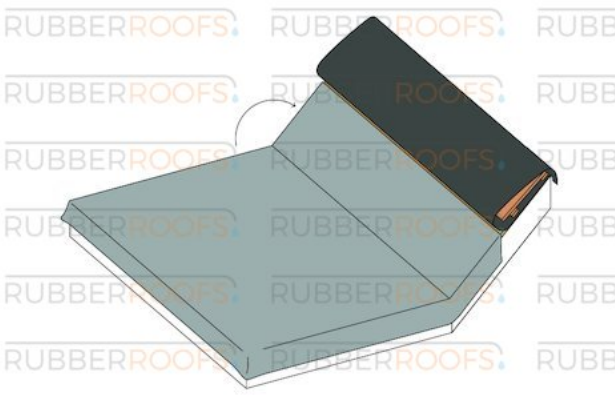



# Under Tiles

A guide to installing Lineflex Fleece Backed EPDM membrane under tiles.

	<p><b>Step 1</b> Carefully remove tiles and battens and place to one side.</p>
	<p><b>Step 2</b> Fold the felt underlay up and tuck under existing tiles.</p>
	<p><b>Step 3</b> Apply a thin coat of contact adhesive to the rubber membrane and lay board.</p>
	<p><b>Step 4</b> Allow both surfaces to dry and, starting from the bottom, mate together, working the rubber into any angle changes.</p>

**Step 5**

Reinstate the felt underlay and battens over the rubber.

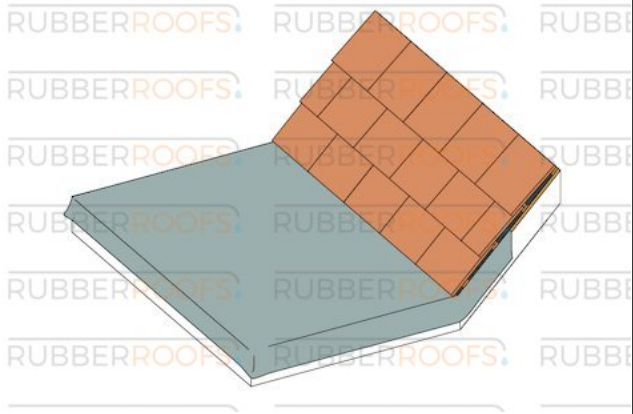**Step 6**

Reinstall the tiles.