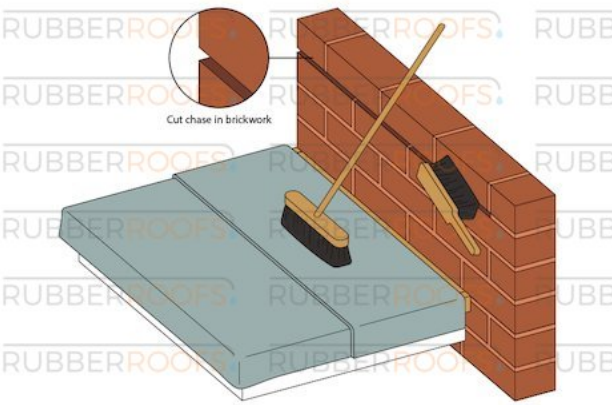
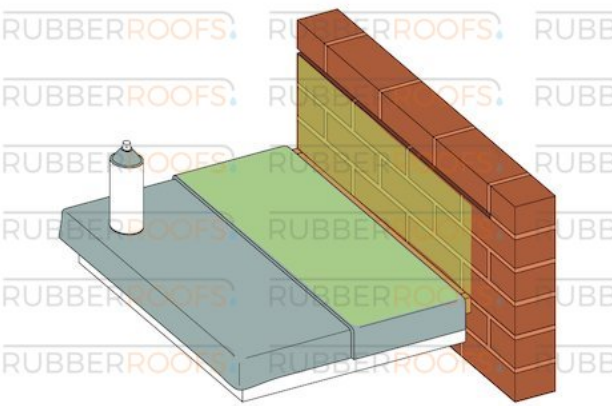
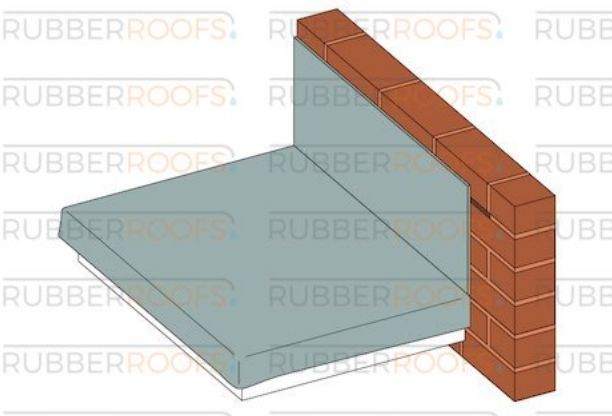
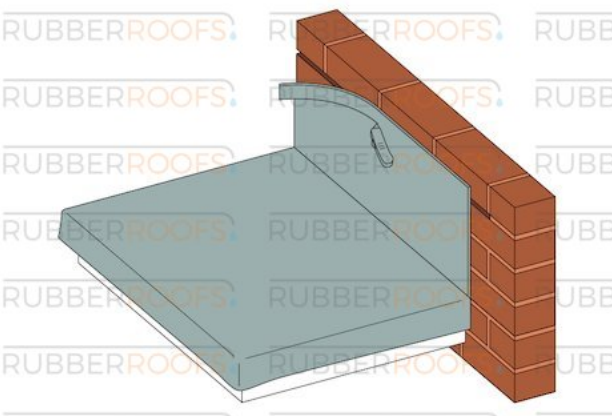
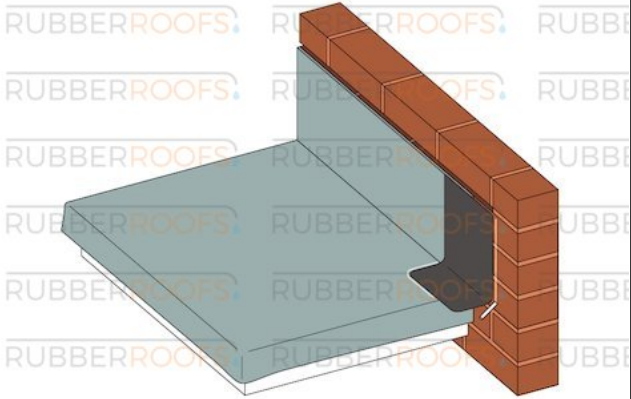


Wall Trim Flashing

A guide to installing a wall trim flashing.


	<p>Step 1 Thoroughly clean the wall, chase and rubber.</p>
	<p>Step 2 Apply a thin coat of contact adhesive to the rubber and the wall.</p>
	<p>Step 3 Once touch dry, starting at the bottom, carefully mate the surfaces together. Smooth by hand and silicone roller.</p>
	<p>Step 4 Trim membrane.</p>

**Step 5**


Position a piece of 9" Flashing Tape or a Detail Kit as shown and mark the perimeter, allowing an extra 1cm.

**Step 6**

Apply Primer to the marked area using a Scrubber Pad and handle, allow primer to dry.

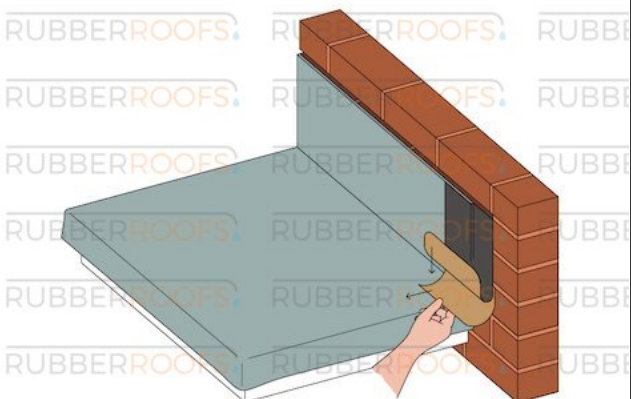**Step 7**




Peel back a section of backing paper and starting from the top, slowly work downwards as shown.

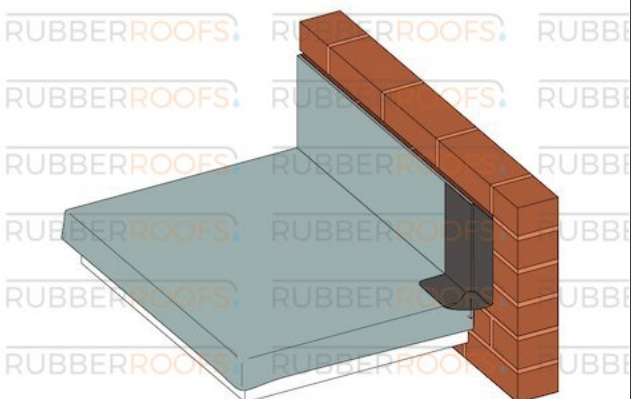**Step 8**

Apply a gentle heat source to the corner if needed.

Step 9

Thoroughly roller with Silicone and Penny Rollers.

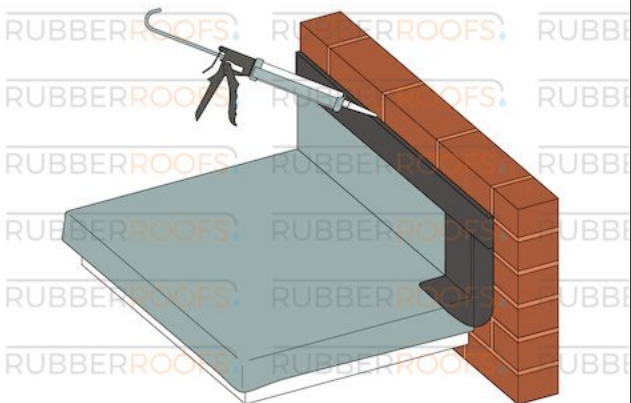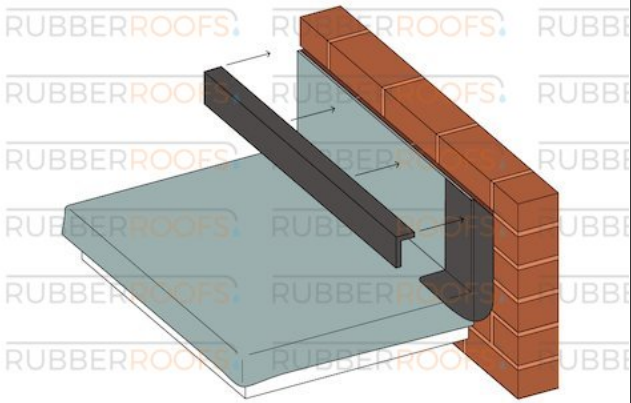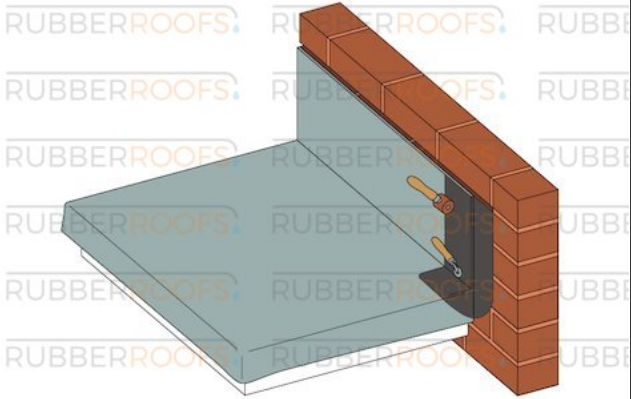

Step 10

Insert wall trim into chase and secure at 600mm centres with the supplied fixings. Raw plugs are not needed if a 5.5mm masonry drill bit is used.

Step 11

Thoroughly seal chase with Wall Mastic.