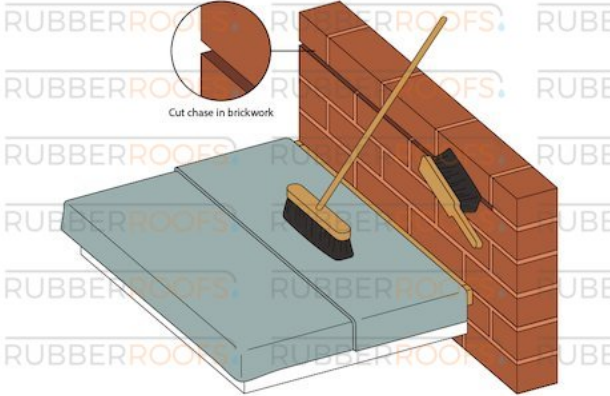
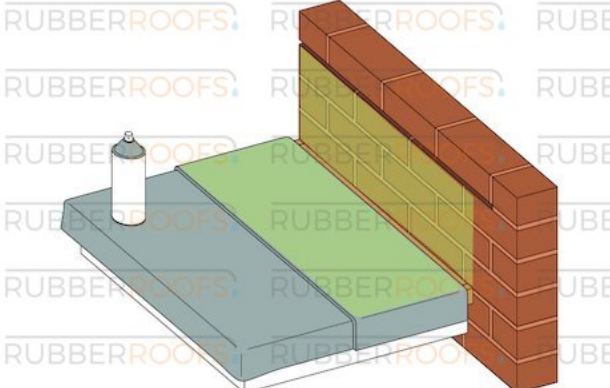
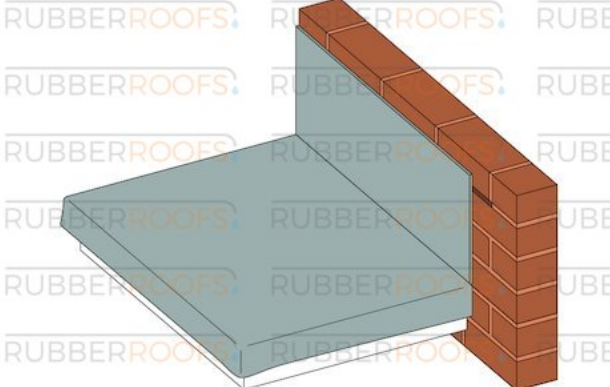
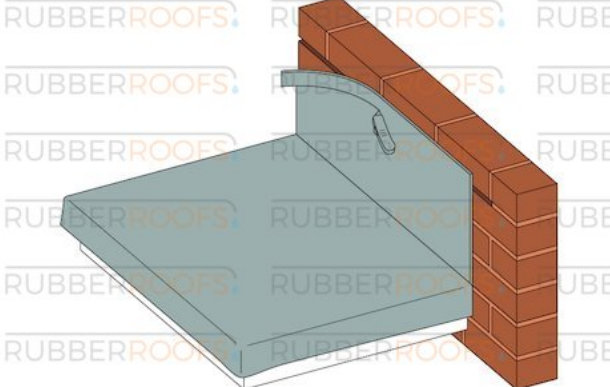
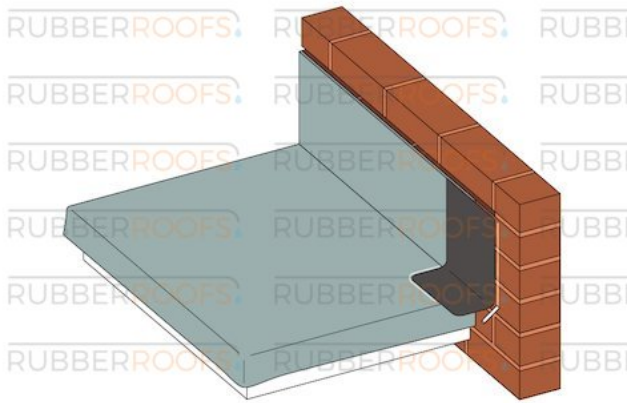


# Wall Trim Flashing

A guide to installing a wall trim flashing.


	<p><b>Step 1</b> Thoroughly clean the wall, chase and rubber.</p>
	<p><b>Step 2</b> Apply a thin coat of contact adhesive to the rubber and the wall.</p>
	<p><b>Step 3</b> Once touch dry, starting at the bottom, carefully mate the surfaces together. Smooth by hand and silicone roller.</p>
	<p><b>Step 4</b> Trim membrane.</p>

**Step 5**


Position a piece of 9" Flashing Tape or a Detail Kit as shown and mark the perimeter, allowing an extra 1cm.

**Step 6**

Apply Primer to the marked area using a Scrubber Pad and handle, allow primer to dry.

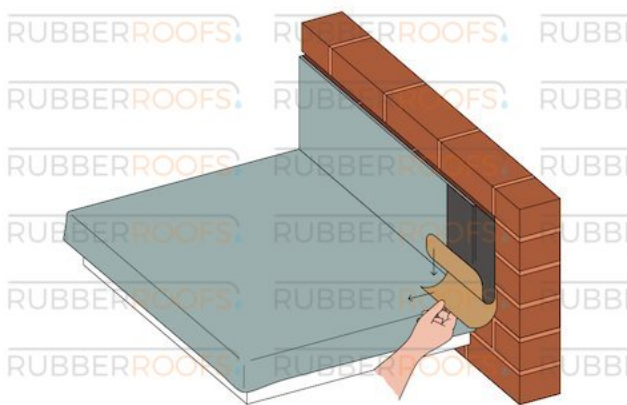**Step 7**



Peel back a section of backing paper and starting from the top, slowly work downwards as shown.

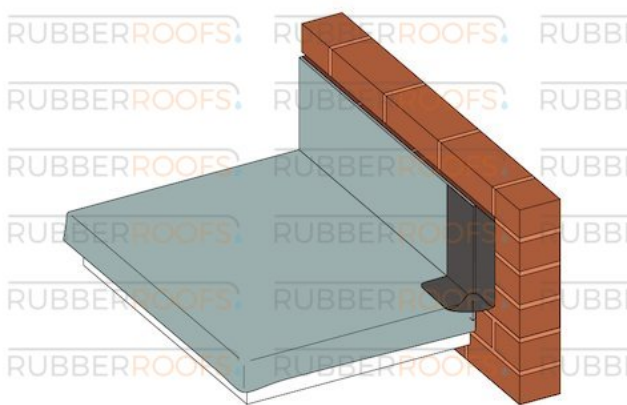**Step 8**

Apply a gentle heat source to the corner if needed.


**Step 9**

Thoroughly roller with Silicone and Penny Rollers.

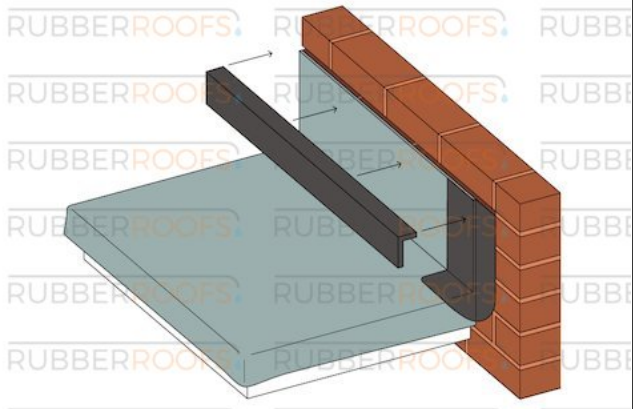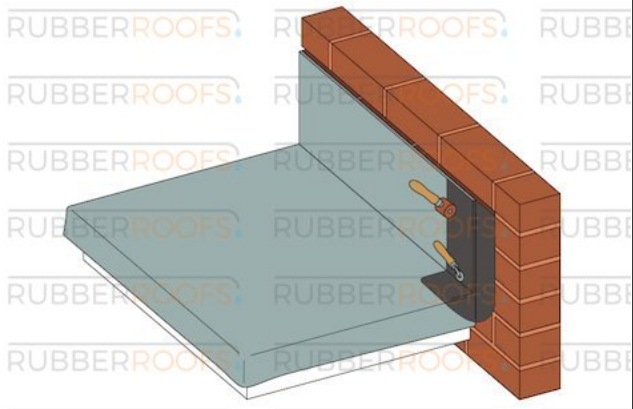

#### **Step 10**

Insert wall trim into chase and secure at 600mm centres with the supplied fixings. Raw plugs are not needed if a 5.5mm masonry drill bit is used.

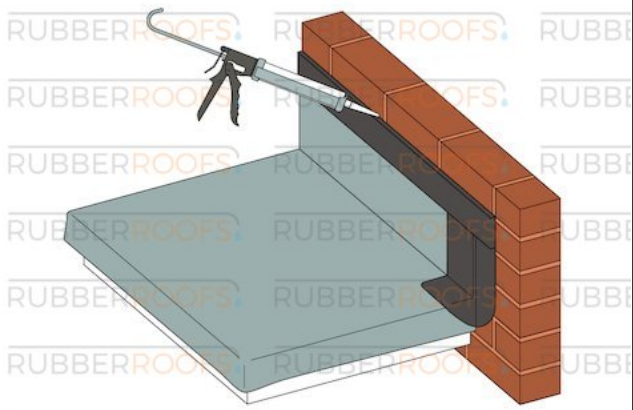

#### **Step 11**

Thoroughly seal chase with Wall Mastic.