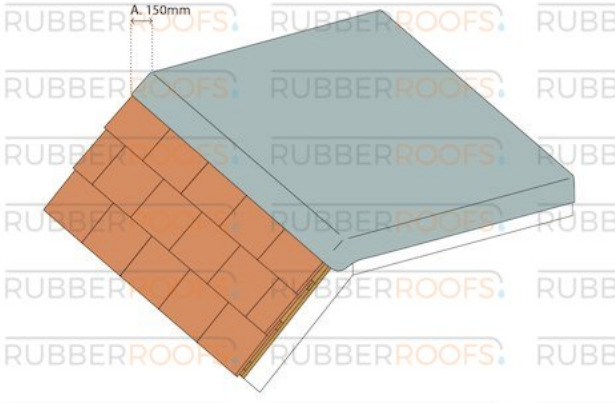
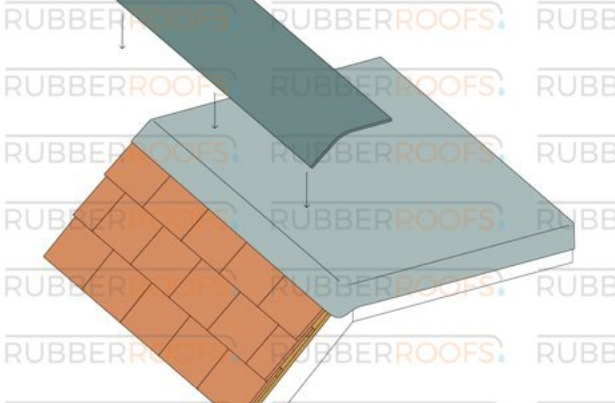
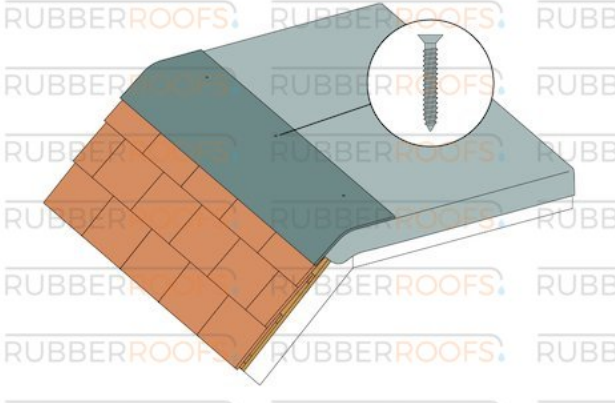

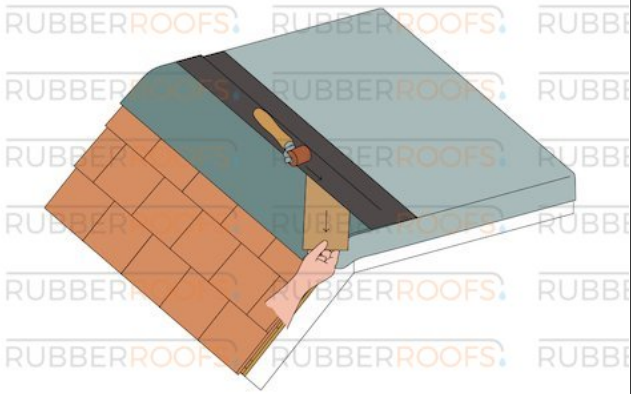


Onto Tiles

Step by step guide on installation EPDM membrane onto tiles. Installation videos & step-by-step guides for full installation available.

 A 3D perspective diagram of a roof corner. A grey EPDM membrane is being laid over orange tiles. A dimension line indicates a 150mm overhang of the membrane onto the tiles. The background is watermarked with 'RUBBERROOFS'.	<p>Step 1 Allow 150mm overhang onto tiles.</p>
 A 3D perspective diagram showing a dark grey lead flashing being installed over the EPDM membrane and tiles. Arrows indicate the lead being dressed into the corner. The background is watermarked with 'RUBBERROOFS'.	<p>Step 2 Dress lead into place 6" onto tiles, 3" onto the deck. We recommend using minimum 9" Code 4 lead cut into 1200mm lengths max.</p>
 A 3D perspective diagram showing a screw being used to secure the lead flashing. A circular inset shows a close-up of the screw. The background is watermarked with 'RUBBERROOFS'.	<p>Step 3 Fix into position using screws.</p>
 A 3D perspective diagram showing a hand applying a dark primer from a can to the lead flashing and the EPDM membrane. The background is watermarked with 'RUBBERROOFS'.	<p>Step 4 Apply Techno primer to lead and rubber approx. 160mm wide using a scrubber pad and handle. Allow to go touch dry.</p>



Step 5

Centralize the 6" batten cover strip and carefully remove release paper applying downward pressure. Use silicone roller to seal.