
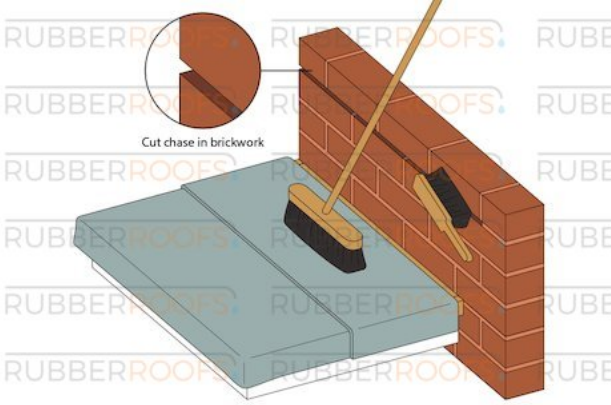
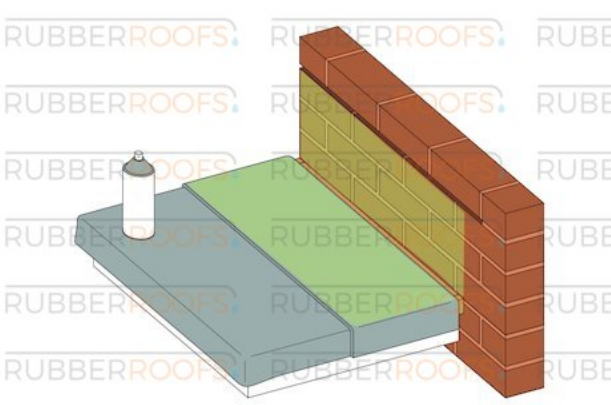
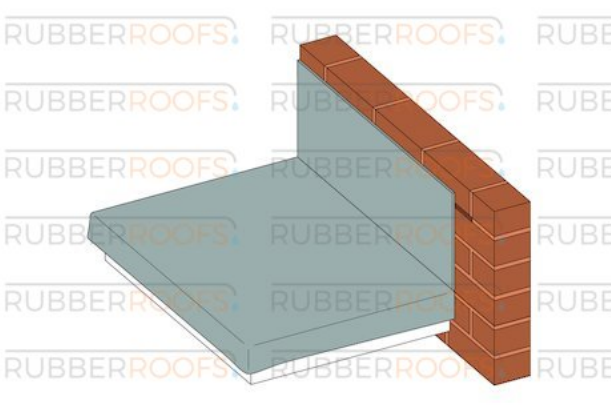
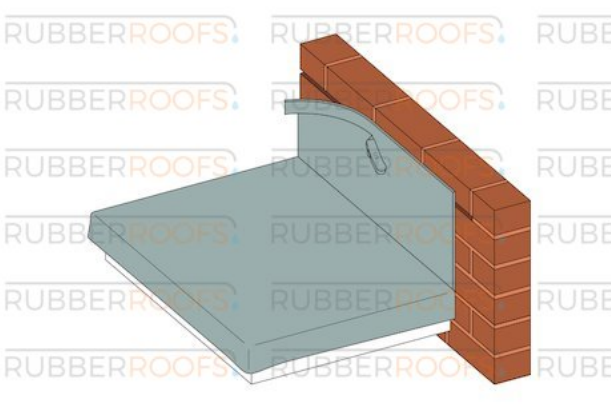


Wall Trim Flashing

Step by step guide on installing wall-trim flashing to your next EPDM Roofing project.

 The diagram shows a cross-section of a brick wall and a blue EPDM rubber membrane. A circular inset shows a close-up of a 'Cut chase in brickwork'. A brush is shown cleaning the wall, and a scraper is shown cleaning the rubber membrane.	Step 1 Thoroughly clean the wall, chase and rubber.
 The diagram shows a cross-section of a brick wall and a blue EPDM rubber membrane. A green layer of contact adhesive is being applied to the wall and the rubber membrane. A bottle of adhesive is shown.	Step 2 Apply a thin coat of contact adhesive to the rubber and the wall .
 The diagram shows a cross-section of a brick wall and a blue EPDM rubber membrane. The rubber membrane is being pressed against the wall, and a silicone roller is shown smoothing the surface.	Step 3 Once touch dry, starting at the bottom, carefully mate the surfaces together. Smooth by hand and silicone roller.
 The diagram shows a cross-section of a brick wall and a blue EPDM rubber membrane. The membrane is being trimmed with a utility knife.	Step 4 Trim membrane.

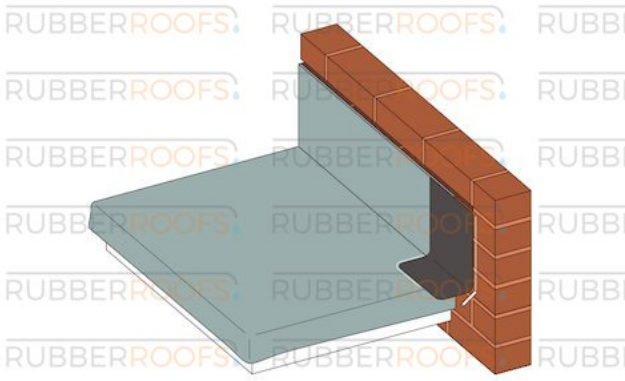


Step 5

Position a piece of 9" Flashing Tape or a Detail Kit as shown and mark the perimeter, allowing an extra 1 cm.




Step 6

Apply Primer plus to the marked area using a Scrubber Pad and handle, allow primer to dry.

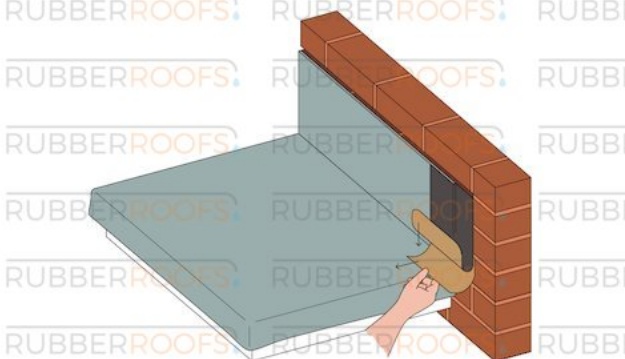

Step 7

Peel back a section of backing paper and, starting from the top, slowly work downwards as shown.


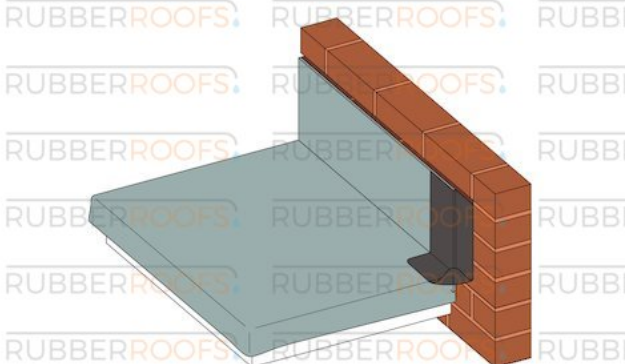


Step 8


Apply a gentle heat source to the corner if needed.

Step 9

Thoroughly roller with Silicone and Penny Rollers.

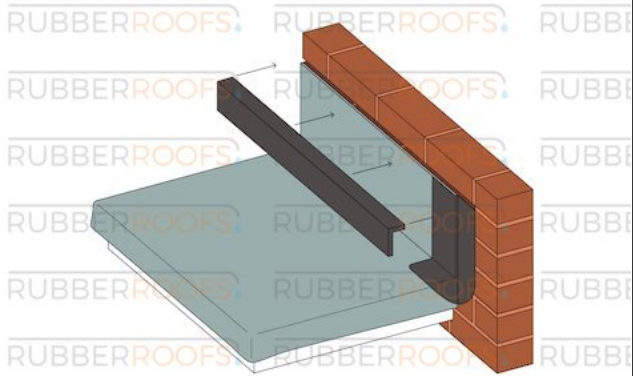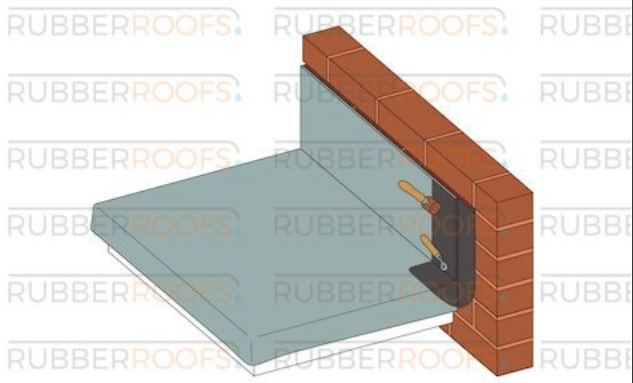**Step 10**

Insert wall trim into chase and secure at 600mm centres with the supplied fixings. Rawplugs are not needed if a 5.5mm masonry drill bit is used.

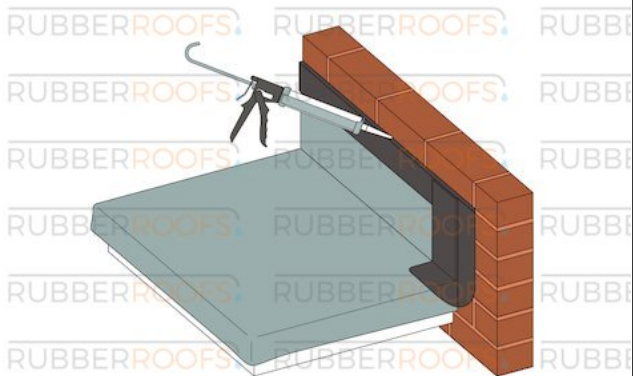**Step 11**

Thoroughly seal chase with Wall Mastic.